

# FR Hoodie

## Sizing Charts

Performance FR WindPro Hoodie									
	XS	S	M	L	XL	2XL	3XL	4XL	5XL
Chest	32-34	36-38	40-42	44-46	48-50	52-54	56-58	60-62	64-66
Sleeve	33	34	35	36.5	38	39	40	41.5	43

FR Hoodie										
	XS	S	M	L	XL	2XL	3XL	4XL	5XL	6XL
Chest	28-30	32-34	36-38	40-42	44-46	48-50	52-54	56-58	60-62	64-66

